

To replace the exerciser/battery:

The engine exerciser contains a backup battery. In case of failure, replace with a CR2032 battery. Single use lithium batteries can generally be disposed of in the trash (wrap with insulating tape). For any disposal questions, contact your local electronics store or waste management company.

1. Make certain that the switch is disconnected from all power and control sources.
2. Undo the front cover screws, or open the door depending on the enclosure style.
3. Disconnect the timer wiring.
4. Remove four screws securing the timer to the support bracket and lift the timer off.
5. Replace the battery on the back side of the exerciser.



⚠ CAUTION

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

⚠ ATTENTION

ATTENTION: Un risque d'explosion existe si la pile n'a pas été correctement remise en place. Remplacez-la exclusivement par une batterie identique ou par un type de batterie équivalent recommandé par le fabricant. Jetez les batteries usagées conformément aux instructions du fabricant.